




NUANCE ENERGY
Revolutionary Solar Racking Structures

NEW PRODUCT RELEASE MEMO

UNIVERSAL CABLE BRACE KIT

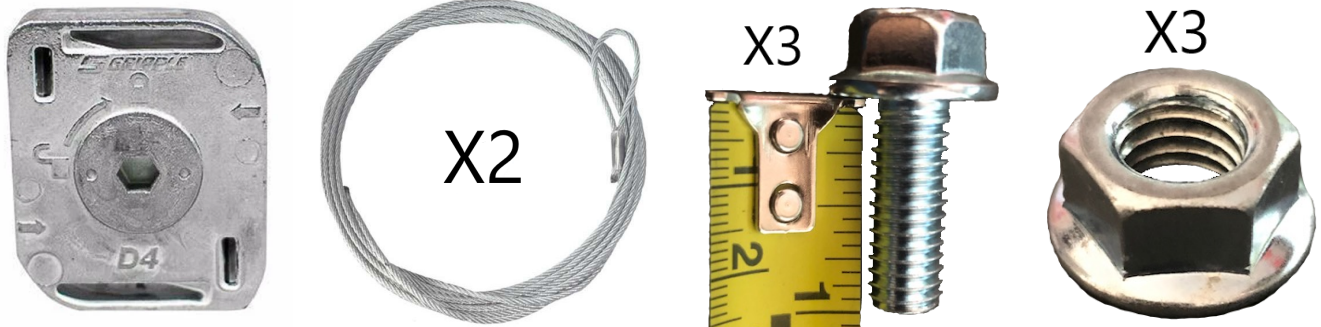

Assembly Part Number: Universal Cable Brace Kit -6LEG-[418-001-01]

Each Universal Cable Brace Kit consists of two cable braces, two aluminum flange nuts, one end of the cable, and one D4 Grip Lock. The Bolts and Nuts are included in the Bill of Materials for each Osprey PowerPlatform.



- Start by bolting the D4 Grip Lock to the top hole on the middle Back Brace using one of the supplied 1" Bolts and Flange Nut in the BOM each Osprey PowerPlatform®.
- Then insert a Bolt into each bottom hole on the two outer Back Braces. These holes should be 2" up from the bottom of each Back Brace.
- Take the looped end of each Cable and wrap around the head of each bottom Bolt.
- Take each open Cable end and pass through each side of the D4 Grip Lock.
- Make sure the cables are square on the chassis and pull the two open Cable ends tight to take all the slack out of them. The D4 Grip Lock will automatically lock each Cable in place.
- Cut the excess Cable off leaving no less than 6" of Cable sticking out either side of the D4 Grip Lock and use a Zip Tie to secure the excess Cable to the now tight Cable on each side.
- Lastly tighten the two 2" bottom Bolts down onto the looped end of the Cables.

